





BMW R 1200 ST

Schutzbügel Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

Crash Bar Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

1 Schutzbügel
Crash Bar

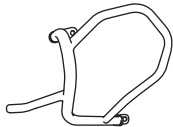


SBL.07.551.901/902 00
Anzahl/ Pcs. 2 (L/R)

2 Innensechskantschraube
Hexagon Socket Screw



M12 x 260 DIN 912
Anzahl/ Pcs. 1

3 Distanzbuchse
Spacer




Da:25 Di:12,5 h:15
Anzahl/ Pcs. 2

4 Innensechskantschraube
Hexagon Socket Screw




M12 x 80 DIN 912
Anzahl/ Pcs. 2

5 Unterlegscheibe
Washer




A: 13 DIN 125
Anzahl/ Pcs. 3

6 Distanzbuchse
Spacer




Da:25 Di:12,5 h:25
Anzahl/ Pcs. 2

7 Klemmschelle
Clamp

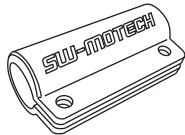


silber/silver
SBL.00.051.002 01
Anzahl/ Pcs. 1

8 Innensechskantschraube
Hexagon Socket Screw



M6 x 20 DIN 912
Anzahl/ Pcs. 2

9 Mutter, selbstsichernd
Lock Nut






M6 DIN 985
Anzahl/ Pcs. 2

SW-MOTECH GmbH & Co. KG
Bahnhofstrasse 44d
35282 Rauschenberg
-Germany-

Tel.: ++ 49 (0) 6425 816 800
Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

! Original Mutter verwenden.
Use the original nut.

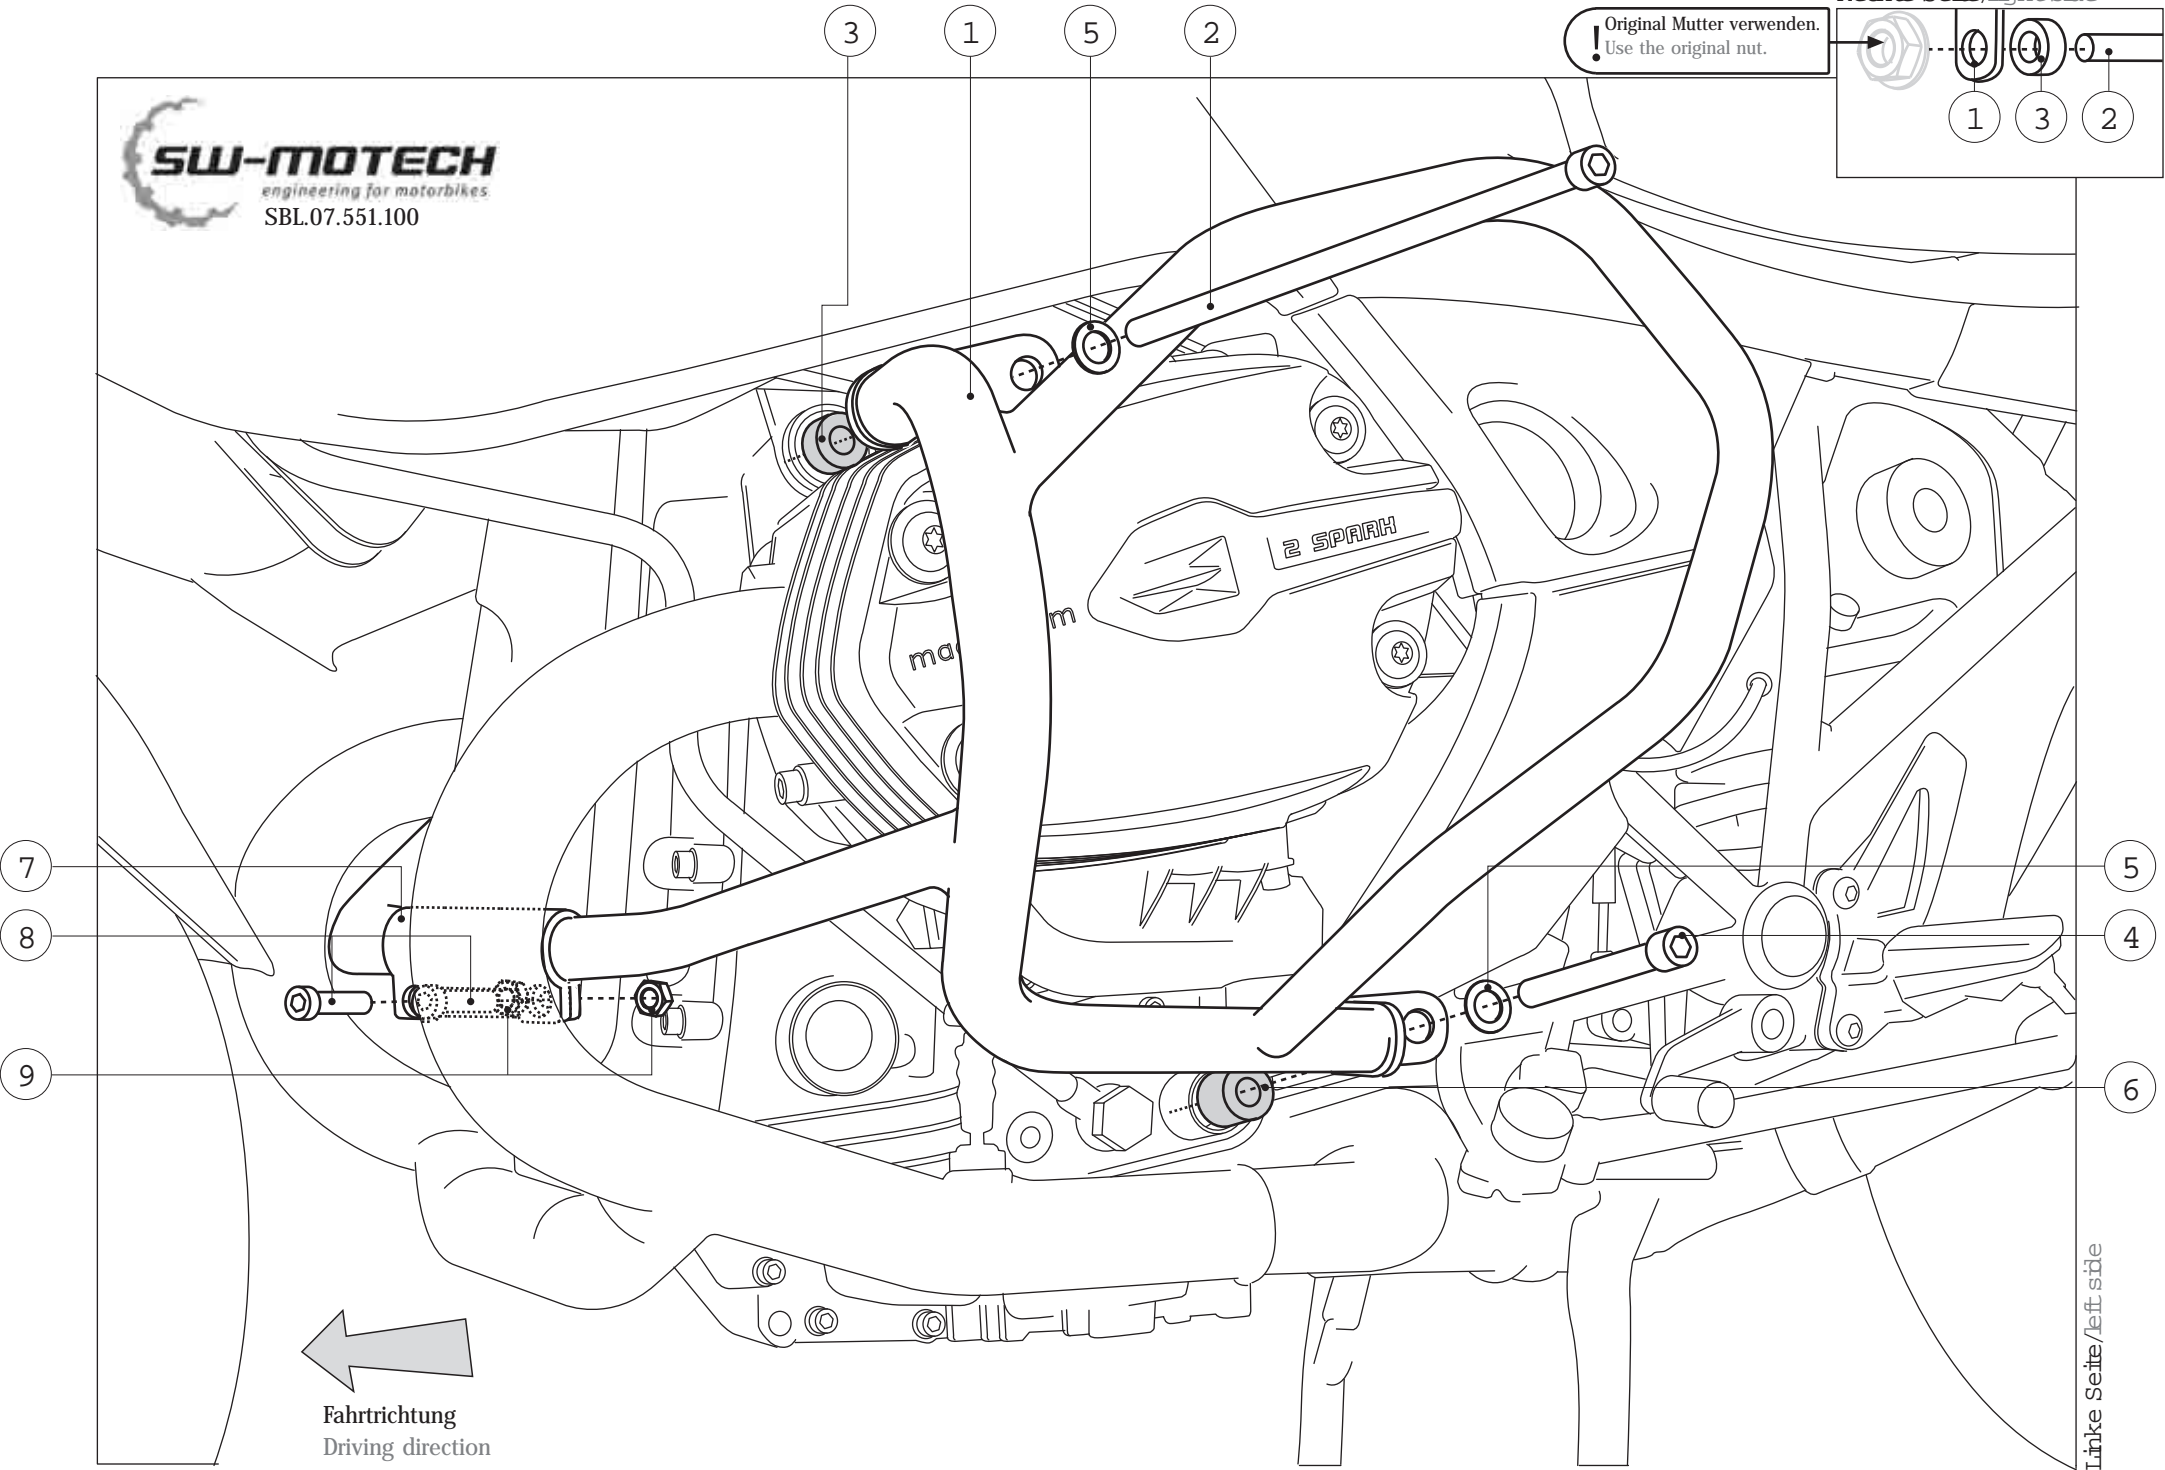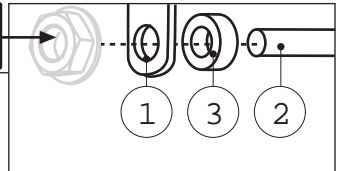

Fahrtrichtung
Driving direction