





## BMW R 1200 ST

### Schutzbügel Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

### Crash Bar Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.


Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

SW-MOTECH GmbH & Co. KG  
Bahnhofstrasse 44d  
35282 Rauschenberg  
-Germany-

Tel.: ++ 49 (0) 6425 816 800  
Fax: ++ 49 (0) 6425 816 810


www.sw-motech.com

1 Schutzbügel  
Crash Bar

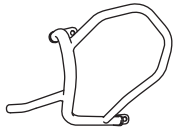

SBL.07.551.901/902 00  
Anzahl/ Pcs. 2 (L/R)

4 Innensechskantschraube  
Hexagon Socket Screw




M12 x 80 DIN 912  
Anzahl/ Pcs. 2

7 Klemmschelle  
Clamp




silber/silver  
SBL.00.051.002 01  
Anzahl/ Pcs. 1

2 Innensechskantschraube  
Hexagon Socket Screw




M12 x 260 DIN 912  
Anzahl/ Pcs. 1

5 Unterlegscheibe  
Washer




A: 13 DIN 125  
Anzahl/ Pcs. 3

8 Innensechskantschraube  
Hexagon Socket Screw




M6 x 20 DIN 912  
Anzahl/ Pcs. 2

3 Distanzbuchse  
Spacer




Da:25 Di:12,5 h:15  
Anzahl/ Pcs. 2

6 Distanzbuchse  
Spacer






Da:25 Di:12,5 h:25  
Anzahl/ Pcs. 2

9 Mutter, selbstsichernd  
Lock Nut



M6 DIN 985  
Anzahl/ Pcs. 2

! Original Mutter verwenden.  
Use the original nut.

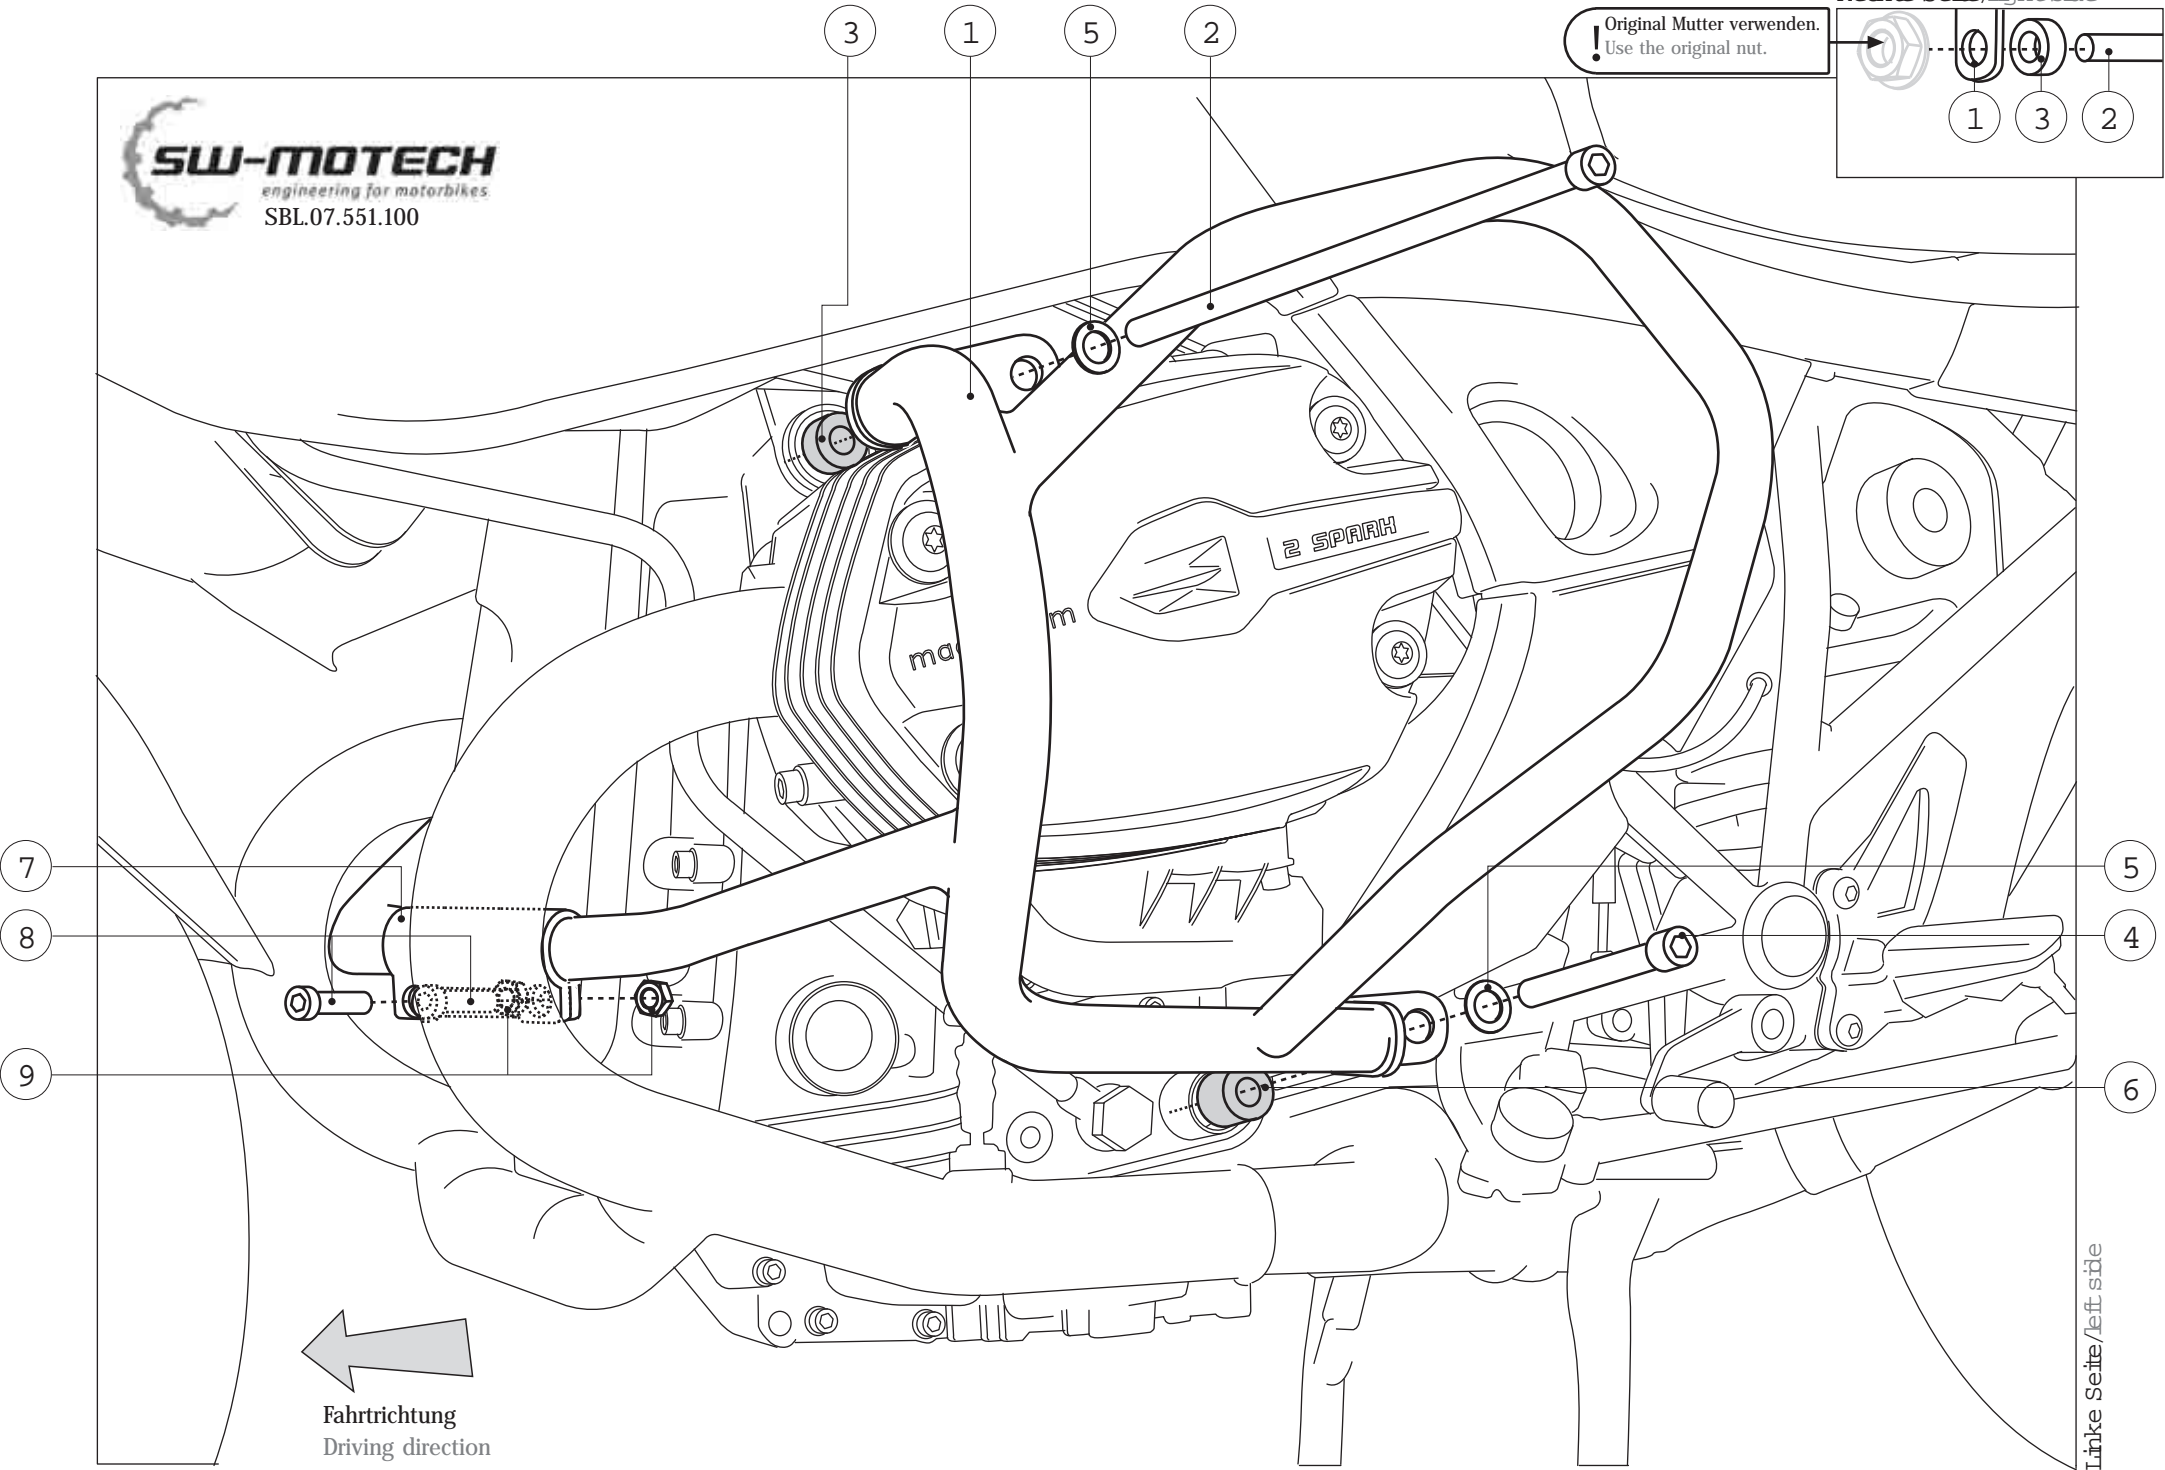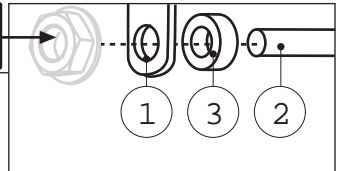

Fahrtrichtung  
Driving direction

Linke Seite/left side