



Model 2007-



Model - 2006



ALU-RACK 2007-

1



ALU-RACK -2006

2



QUICK-LOCK Side Carrier

3

2007-



QUICK-LOCK Side Carrier

4

-2006




Crashbar

5



Centerstand Handle

6

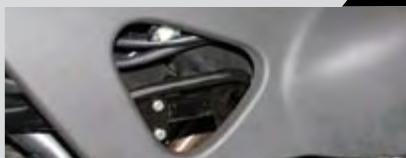

Centerstand

7



XL1000 V Varadero	from to	Note	Part Number
ALU-RACK, silver	98 06	Adapter Plate required for mounting cases (sold separately).	GPT.01.336.100/S
ALU-RACK, black	07 -	Adapter Plate required for mounting cases (sold separately).	GPT.01.625.100/B
ALU-RACK, silver	07 -	Adapter Plate required for mounting cases (sold separately).	GPT.01.625.100/S
QUICK-LOCK Side Carrier	98 02	Case Adapter Kits sold separately.	KFT.01.117.100
QUICK-LOCK Side Carrier	03 06	Case Adapter Kits sold separately.	KFT.01.231.100
QUICK-LOCK Side Carrier	07	Case Adapter Kits sold separately.	KFT.01.624.100
QUICK-LOCK EVO-Carrier	07 -	For TraX ALU-BOX, please order TraX Adapter Kit	KFT.01.624.200
QUICK-LOCK Profile Carrier	07 -	For GIVI V35 PLX or Kappa K33N K-Road cases. Hardware incl.	KFT.01.624.150
Crashbar, black	98 02	Montage in Fachwerkstatt empfohlen	SBL.01.051.100
Crashbar, black	03 03	Professional installation recommended. (for models without ABS)	SBL.01.225.100
Crashbar, black	04 05	Professional installation recommended. (for models without ABS)	SBL.01.320.100
Crashbar, black	06 -	Professional installation recommended.	SBL.01.322.100
Centerstand Handle	98 -	Assist grip for centerstand (HPS.01.048.100).	HPS.01.223.910
Centerstand	98 02	TÜV-Certified.	HPS.01.048.100
Centerstand	03 -	TÜV-Certified.	HPS.01.223.100
Mirror Extension	- -	Universal Mirror Extension.	SVL.00.505.101
Cockpit GPS-Mount	07 -	Mounts directly with the TomTom Rider & Garmin Zumo. Compatible with GPS/PDA bags & RAM-Mount GPS-cradles.	GPS.01.440.100