



SBL.01.024.100  
Revision: 00



## Schutzbügel Honda Homet CB 600

### Montagehinweise

Alle vom Motorrad geübten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M 6	9,6 Nm
M 8	23 Nm
M 10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50km alle Verbindungen auf festen Sitz.

M 6	9,6 Nm
M 8	23 Nm
M 10	46 Nm

### Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

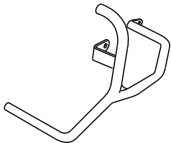






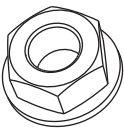

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

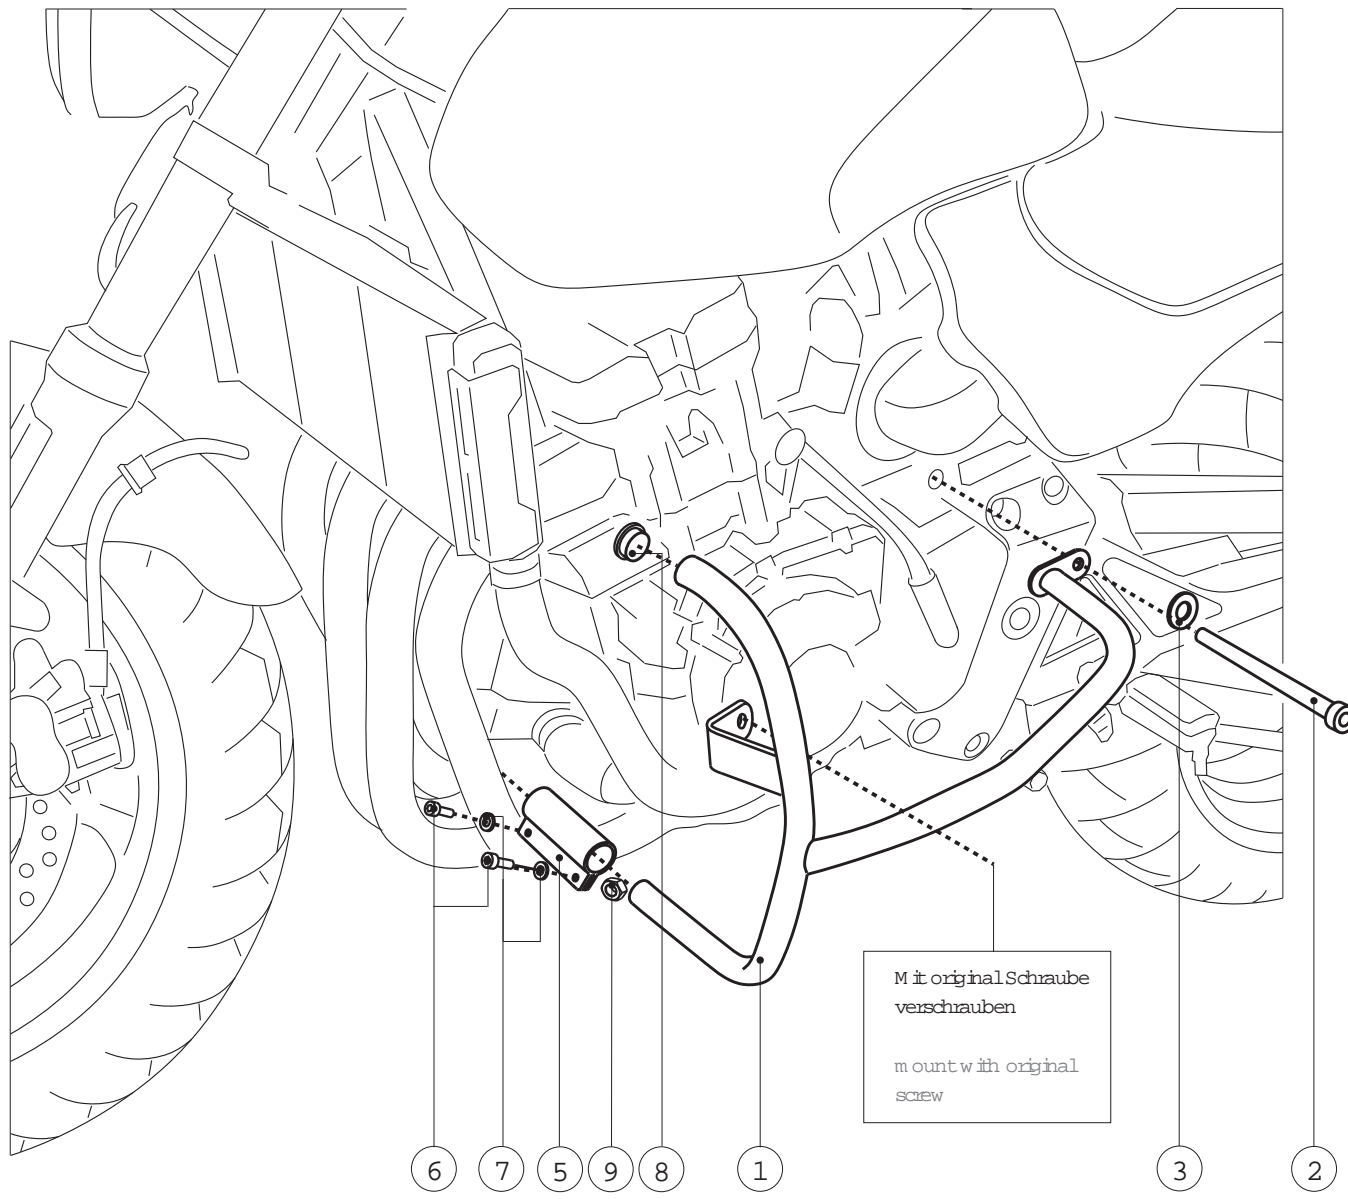
Medium strength liquid thread-locker (i.e., "Loctite") should be used to secure all screws, bolts and nuts.

SW-MOTECH GmbH & Co. KG  
Bahnhofstrasse 44d  
35282 Rauschenberg  
-Germany-

Tel: ++ 49 (0) 6425 816 800  
Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

<p>1 Schutzbügel Crash Bar</p>  <p>SBL.01.024.901.902</p> <p>Anzahl/Pcs. 2 (L,R)</p>	<p>5 Klemmscheibe Clamp</p>  <p>SBL.00.051.002.B/SW</p> <p>Anzahl/Pcs. 1</p>	<p>9 Mutter selbstsichernd Hexagon screw</p>  <p>M 6 DN 985</p> <p>Anzahl/Pcs. 2</p>
<p>2 Zylinderschraube mit Innensechskant Hexagon Socket Screw</p>  <p>M 10 x 220 DN 912</p> <p>Anzahl/Pcs. 1</p>	<p>6 Zylinderschraube mit Innensechskant Hexagon Socket Screw</p>  <p>M 6 x 20 DN 912</p> <p>Anzahl/Pcs. 2</p>	
<p>3 Unterlegscheibe Washer</p>  <p>A 10,5 DN 125</p> <p>Anzahl/Pcs. 1</p>	<p>7 Unterlegscheibe Washer</p>  <p>A 6,4 DN 125</p> <p>Anzahl/Pcs. 2</p>	
<p>4 Mutter mit Bund Lock Nut</p>  <p>M 10 DN 6927</p> <p>Anzahl/Pcs. 1</p>	<p>8 Rahmenendkappen Plastic Cap</p>  <p>KES.00.20.02.B</p> <p>Anzahl/Pcs. 2</p>	



Mit original Schraube  
verschrauben  
mount with original  
screw

Auf der rechten Seite mit  
Schraube ②  
montieren.  
Mount on right  
side with screw ② .



4