





SBL.01.279.100
Revision: 01

Schutzbügel Honda CBF 600

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG
Bahnhofstrasse 44d
35282 Rauschenberg
-Germany-

Tel.: ++ 49 (0) 6425 816 800
Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

1 Schutzbügel
Crash Bar

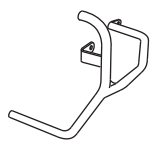

SBL.01.279.901/902

Anzahl/ Pcs. 2 L/R


2 Zylinderschraube mit Innensechskant
Hexagon Socket Screw



M10 x 240 DIN 912

Anzahl/ Pcs. 1


6 Klemmschelle
Clamp

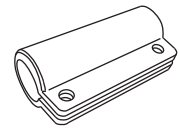

SBL.01.051.002/B

Anzahl/ Pcs. 1


3 Unterlegscheibe
Washer



A 10,5

Anzahl/ Pcs. 1


7 Zylinderschraube mit Innensechskant
Hexagon Socket Screw



M6 x 20 DIN 912

Anzahl/ Pcs. 2


4 Mutter mit Bund
Nut with Washer



M 10 DIN 6927

Anzahl/ Pcs. 1


8 Mutter selbstsichernd
Lock Nut



M 6 DIN 985

Anzahl/ Pcs. 2


5 Distanzbuchse
Spacer



Da:20 Di:10,5 h:25

Anzahl/ Pcs. 1

9 Rahmenendkappen
Plastic Cap



KES.00.20.02

Anzahl/ Pcs. 2

