



HPS.11.258.100
Revision: 01

Hauptständer Centre Stand

TRIUMPH Tiger 955i
bis Bj. 2004

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

Die Kurvenfreiheit kann durch einen Hauptständer eingeschränkt werden

SW-MOTECH GmbH & Co. KG
Bahnhofstrasse 44d
35282 Rauschenberg
-Germany-

Tel.: ++ 49 (0) 6425 816 800

Fax: ++ 49 (0) 6425 816 810

www.sw-motech.com

Mounting Instructions

Centerstand cornering clearance:

SW-MOTECH centerstands are carefully designed and tested to eliminate reductions in cornering clearance and ground clearance under most driving conditions on an unmodified stock motorcycle, and are certified to be compliant with European ABE safety standards. Use of any centerstand may reduce cornering clearance or ground clearance under extreme driving situations.

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm
M10	46 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

1 Hauptständer
Centre Stand



HPS.11.258.900-01

Anzahl/ Pcs. 1


2 Befestigungsblech
rechts
Fixing Lug right



HPS.11.258.902-01

Anzahl/ Pcs. 1


5 Innensechskant-
schraube
Hexagon Socket
Screw



M8 x 70 DIN 912

Anzahl/ Pcs. 2

3 Befestigungsblech
links
Fixing Lug left

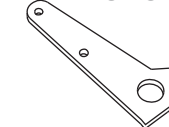

HPS.11.258.901-01

Anzahl/ Pcs. 1


6 Unterlegscheibe
Washer



A 8,4 DIN 125

Anzahl/ Pcs. 2

4 Zugfeder-Satz
Spring Set

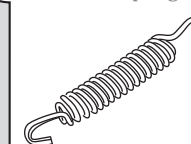

ZFD.00.150.005/ST

Anzahl/ Pcs. 1

! Arbeitsschritte zur Montage

1. Bremshebel und Fußrastenhalteplatte rechts demontieren.
2. Befestigungsblech rechts zusammen mit Fußrastenhalteplatte montieren.
3. Fußrastenplatte links demontieren.
4. Ständer einsetzen und Fußrastenhalteplatte zusammen mit Seitenteil befestigen.

Mounting Steps

1. Remove brake lever and feet rest holder.
2. Fix the right side plate together with the feet rest holder.
3. Remove the left feet rest holder.
4. Insert the center stand and fix the left feet rest holder together with the side plate.

! Alle Schrauben mit Schraubensicherung einsetzen.

Insert all screws with retainer.

! Achtung:
Die Kurven- und Bodenfreiheit kann durch einen Hauptständer eingeschränkt werden.

Attention:
Cornering and ground clearance can be reduced by using a centre stand.

